

## Coverall Donning Instruction



1

Select appropriate coverall and read User Instruction.




2

Remove shoes and secure trousers into socks. Step into legs of coverall and place coverall over safety boots.




3

Pull coverall towards arms and shoulders.

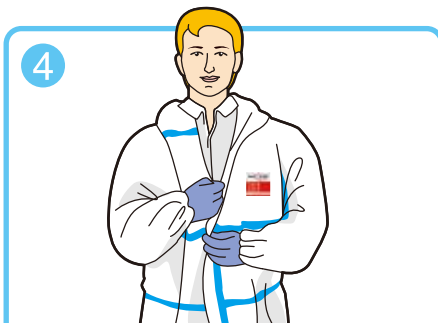


4

Pull zipper halfway up. Put on face mask (or respirator) and goggles. Pull hood over as head coverings. Cover sleeves over gloves.

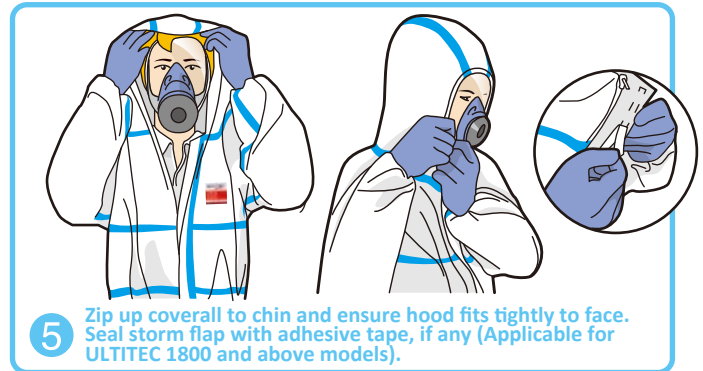

5

Zip up coverall to chin and ensure hood fits tightly to face. Seal storm flap with adhesive tape, if any (Applicable for ULTITEC 1800 and above models).

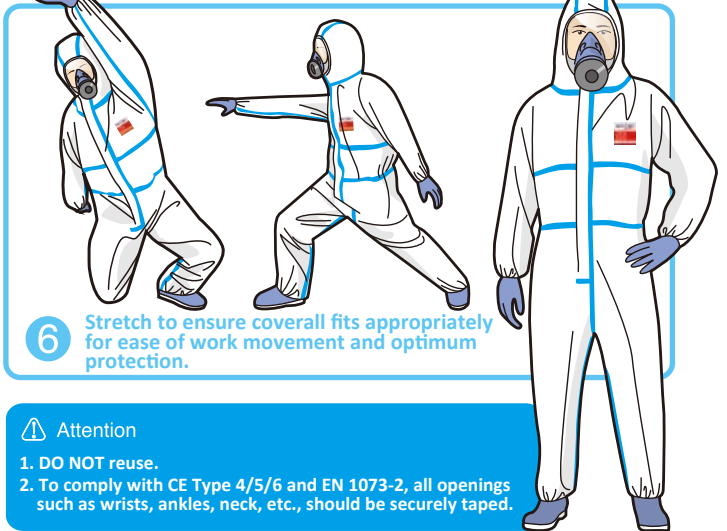

6

Stretch to ensure coverall fits appropriately for ease of work movement and optimum protection.

### ⚠ Attention

1. DO NOT reuse.
2. To comply with CE Type 4/5/6 and EN 1073-2, all openings such as wrists, ankles, neck, etc., should be securely taped.

## Coverall Doffing Instruction



1

Remove adhesive tape (Applicable for ULTITEC 1800 and above models).




2

Unzip to waist.




3

Grab outer part and pull hood away from head.

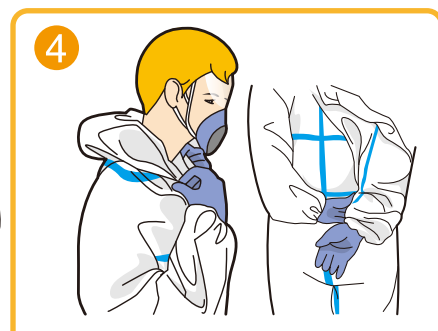


4

Release first arm and strip off glove from behind back.

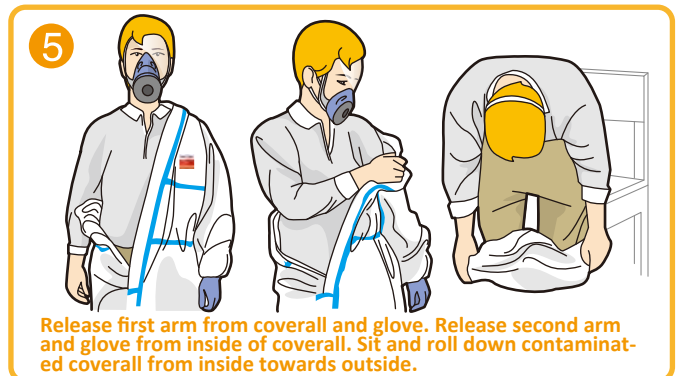

5

Release first arm from coverall and glove. Release second arm and glove from inside of coverall. Sit and roll down contaminated coverall from inside towards outside.

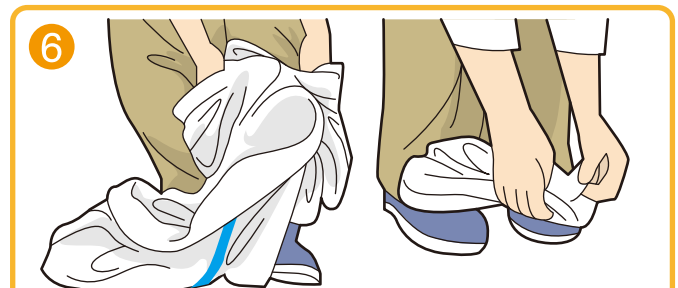

6

Draw out legs from safety boots. Fold or roll into a bundle and dispose coverall responsibly.

### ⚠ Attention

1. Be careful that no contaminant comes into contact with the wearer.
2. Contaminated garment should be disposed in accordance with local regulations.

